## Fun 2DA & 2DM

Design by VERNER PANTON

Please read thoroughly before assembly




#### **IMPORTANT!**

ALWAYS TURN OFF THE ELECTRICAL CURRENT BEFORE INSTALLLING ANY FIXTURE!

BE SURE THAT THE CEILING OUTLET BOX IS MOUNTED SO THAT IT CAN CARRY THE WEIGHT OF THE ENTIRE LAMP!

THERE MUST BE NO WEIGHT ON THE ELECTRIC WIRES!

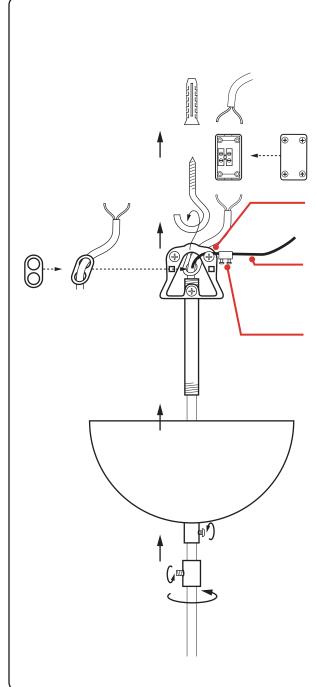

#### **IMPORTANT!**

Screw a strong hook firmly into a stable ceiling. Hang the lamp fixture from the hook


Adjust the black hanging wire, which MUST support the total weight of the lamp.

For extra safety, screw the wire lock tightly to the black hanging wire

#### HANG THE TOP PART OF THE LAMP FROM THE CEILING

THE LAMP MUST HANG FROM THE BLACK HANGING WIRE, NOT THE ELECTRIC WIRE!

THERE MUST BE NO WEIGHT ON THE ELECTRIC WIRES!

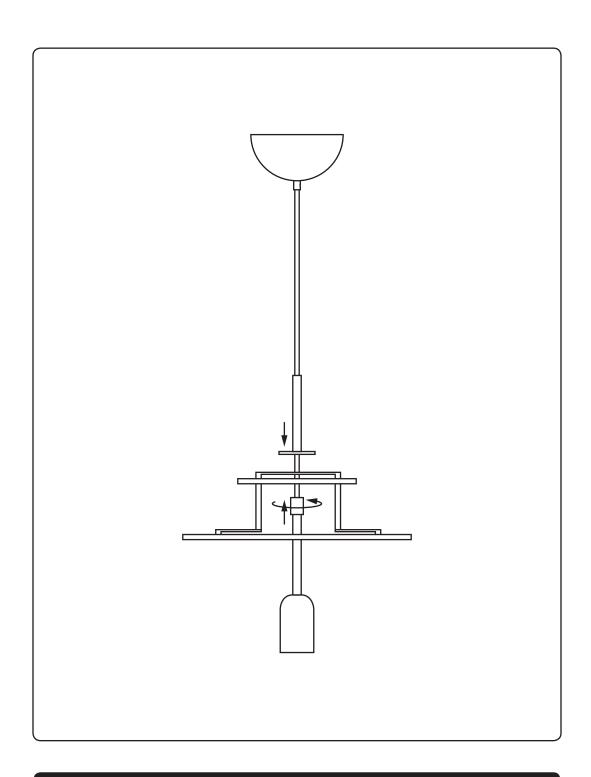



#### **MOUNTING THE METAL FRAME**

After you have mounted the ceiling canopy to the ceiling please mount the metal frame together with the cord (incl. socket).

Screw the metal tubes firmly together!

Now you are ready to hang the plates at the metal frame.

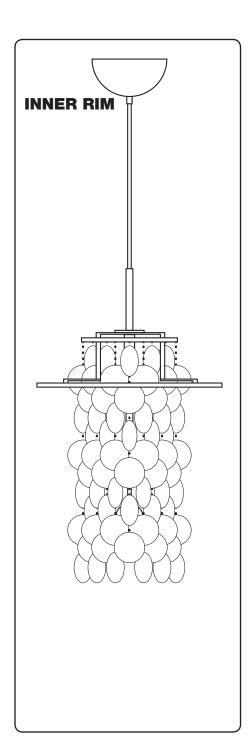

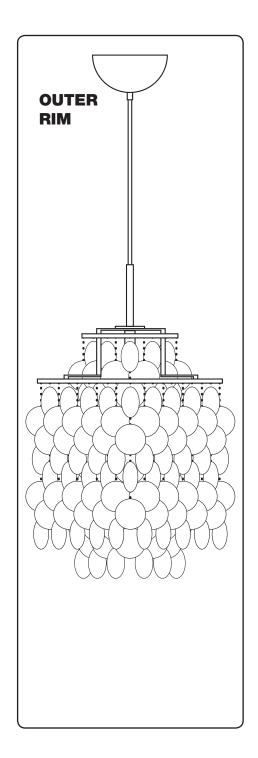

#### **INNER RIM**

Mount plates from box with 6 pcs. Box is marked "INNER RIM".

Please note: The chains in the box are not the same length, so it is important that


you alternate between the two lengths.

#### **OUTER RIM**

Mount plates from box with 4 pcs. Box is marked "OUTER RIM".

Please note:

The chains in the box are not the same length, so it is important that you alternate between the two lengths.

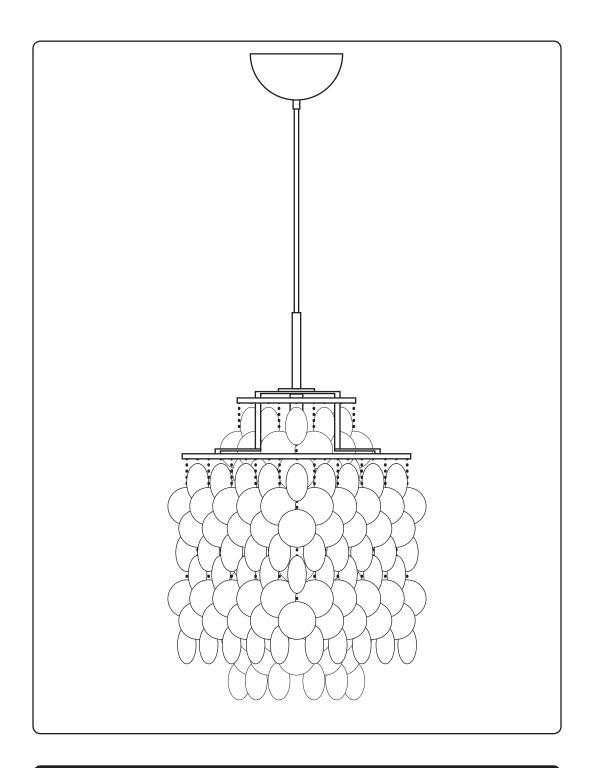

### HOW TO CLEAN:

Clean with a soft cloth, warm water and a mild detergent. Do NOT use any abrasive materials.

# DESIGNED IN THE PAST MADE FOR TOMORROW

VERPAN ApS

Egeskovvej 29

8700 Horsens

Denmark

www.verpan.com

info@verpan.com